

# Intelli-Time® Alarm Clock

model 13030



## CONTENTS

Unpacking Instructions .....	2	Using the Alarm Clock.....	5
Package Contents .....	2	Troubleshooting .....	5
Product Registration .....	2	Care & Maintenance.....	6
Features & Benefits.....	3	Replace Intelli-Time® Battery ...	6
Clock Setup.....	4	Specifications.....	6
Intelli-Time® Clock .....	4	Customer Support .....	7
Set the Time & Date .....	4	Warranty.....	7

**Questions?** Contact Customer Support at  
(877) 221-1252 or visit [www.AcuRite.com](http://www.AcuRite.com).

**SAVE THIS MANUAL FOR FUTURE REFERENCE.**

# ACURITE®

Congratulations on your new AcuRite product. To ensure the best possible product performance, please read this manual in its entirety and retain it for future reference.

## Unpacking Instructions

Remove the protective film that is applied to the LED screen prior to using this product. Locate the tab and peel off to remove.

## Package Contents

1. Alarm clock
2. Instruction Manual

# IMPORTANT

PRODUCT MUST BE REGISTERED  
TO RECEIVE WARRANTY SERVICE

## PRODUCT REGISTRATION

Register online  
to receive 1 year  
warranty protection

[www.AcuRite.com](http://www.AcuRite.com)

SHOP NOW

SUPPORT

Support Forum

Archived Products


▶ Register a Product

# Features & Benefits



## FRONT OF CLOCK

- 1. SNOOZE Button**
- 2. Alarm ON/OFF Switch**
- 3. Dimmer LO/HI Switch**
- 4. Alarm Volume LO/HI Switch**
- 5. PM Indicator**
- 6. Current Time**
- 7. ALARM On Indicator**
- 8. Clock Set Button**
- 9. Down Arrow Button**  
for setup preferences and viewing date.
- 10. Up Arrow Button**  
for setup preferences and viewing date.
- 11. Alarm Set Button**

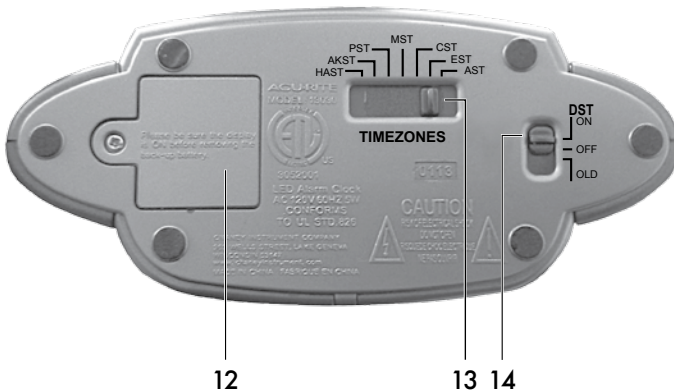

## BOTTOM OF CLOCK

- 12. Intelli-Time Battery Compartment**
- 13. TIMEZONE Switch**
- 14. DST ON/OFF/OLD Switch**

## Clock Setup

Plug the power cord into power outlet.

### Intelli-Time® Clock

Intelli-Time clock and calendar are pre-programmed to the correct time and date, and update automatically for Daylight Saving Time. All you need to do is select your time zone using the "TIMEZONES" switch.

### Set the Time & Date

Choose the correct time zone (HAST AKST PST MST CST EST AST) using the "TIMEZONES" switch on the bottom of the clock.

Choose Daylight Saving Time ON, OFF or OLD using the DST switch on the bottom of the clock. If you live in an area that observes Daylight Saving Time, DST should be set to ON, even if it is not currently Daylight Saving Time.

#### MORE INFORMATION ON DAYLIGHT SAVING TIME (DST):

The following chart illustrates the differences between the auto DST settings and when each setting automatically changes the time during the year.

NEW DST	OLD DST	OFF
<b>2007 and beyond:</b> 2:00 am 2nd Sunday in March 2:00 am 1st Sunday in November	<b>2006:</b> 2:00 am 1st Sunday in April 2:00 am last Sunday in October	No DST changes

**AUTO DST NOTE:** Portions of Indiana and Arizona do not observe daylight saving time. If you live in an area that does not observe daylight saving time, turn the DST function off.


Press and hold the "⌚ CLOCK SET" button for 3 seconds to enter the SET MODE. Once in the SET MODE the preference you are currently in will blink on the clock.

To save your adjustments, press and release the "⌚ CLOCK SET" button to adjust the next preference. The preference order is as follows:


- CLOCK HOUR** (Please note PM Indicator light)
- CLOCK MINUTE**
- CALENDAR YEAR**
- CALENDAR MONTH**
- CALENDAR DATE**

You will automatically exit SET MODE if no buttons are pressed for 30 seconds. Enter SET MODE any time by pressing and holding "⌚ CLOCK SET" button for 3 seconds.

### Dimmer HI/LO

Optimize the display brightness for the location with the  Dimmer LO/HI switch located on the left side of the front of the clock.

### Volume HI/LO

Optimize the alarm volume for the location with the  Volume LO/HI switch located on the left side of the front of the clock.

## Using the Alarm Clock

### Set the Alarm Time

To set alarm time, press the "🔔 Alarm Set" button once to review alarm time. Press the "🔔 Alarm Set" button again to enter ALARM SET MODE.

To adjust the currently selected (flashing) item, press and release the "▲" or "▼" buttons (press and HOLD to fast adjust).

To save your adjustments, press and release the "🔔 Alarm Set" button to adjust the next preference. The preference set order is as follows:

**ALARM CLOCK HOUR** (Please note PM Indicator light)

**ALARM CLOCK MINUTE**

You will automatically exit ALARM SET MODE if no buttons are pressed for 30 seconds. Enter ALARM SET MODE at any time by pressing the "🔔 Alarm Set" button twice.

### Alarm Clock ON or OFF function

To Turn Alarm on: Slide the "🔔 Alarm ON/OFF" switch to ON. The ALARM ON icon appears on the screen.

To Turn Alarm off: Press the "🔔 Alarm ON/OFF" switch to OFF. The ALARM ON icon disappears from the screen.

### Alarm Clock SNOOZE function

The alarm will sound for 1 minute before turning off when no button is pressed. When the alarm is sounding, activate the 8 minute SNOOZE function by pressing the SNOOZE button on the top of the alarm clock. SNOOZE function remains active until "🔔 Alarm ON/OFF" switch is turned OFF.

## Troubleshooting

### Blinking Colon (dots)

- Blinking of the dots is a way that the seconds are counted. There is no way to stop the dots from blinking.

**If your AcuRite product does not operate properly after trying the troubleshooting steps, visit [www.AcuRite.com](http://www.AcuRite.com) or call (877) 221-1252 for assistance.**


## Care & Maintenance

### Clock Care

Clean with a soft, damp cloth. Do not use caustic cleaners or abrasives. Keep away from dust, dirt and moisture. Clean ventilation ports regularly with a gentle puff of air.

### Replace Intelli-Time Clock Battery

Intelli-Time technology is powered by a pre-installed coin-cell battery that stores the time and date settings. The battery has a shelf life of several years. Time and date will need to be entered after replacing Intelli-Time battery. To replace the Intelli-Time battery:

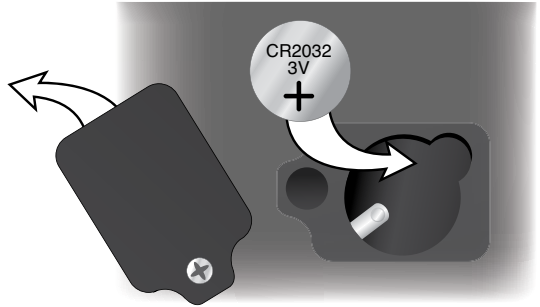

1. Locate the coin cell battery compartment on the bottom of the clock. Unscrew and remove the compartment cover.
2. Insert 1 x CR2032 coin cell battery into the battery compartment, as shown. Install battery with "+" positive terminal facing OUT.
3. Screw in the battery cover.



**WARNING: THIS PRODUCT CONTAINS A BUTTON-CELL BATTERY. IF SWALLOWED, IT COULD CAUSE SEVERE INJURY OR DEATH IN JUST 2 HOURS. SEEK MEDICAL ATTENTION IMMEDIATELY IF INGESTED.**



## Specifications

<b>POWER</b>	AC power cord (120V)
--------------	----------------------

## Customer Support

AcuRite customer support is committed to providing you with best-in-class service. **For assistance**, please have the model number of this product available and contact us in any of the following ways:



(877) 221-1252



info@chaney-inst.com

24/7 support at [www.AcuRite.com](http://www.AcuRite.com)

- ▶ Installation Videos
- ▶ Register your Product
- ▶ Instruction Manuals
- ▶ Support User Forum
- ▶ Replacement Parts
- ▶ Submit Feedback & Ideas

## IMPORTANT

PRODUCT MUST BE REGISTERED  
TO RECEIVE WARRANTY SERVICE

### PRODUCT REGISTRATION

Register online  
to receive 1 year  
warranty protection

[www.AcuRite.com](http://www.AcuRite.com)

PNOW

SUPPORT

Support Forum

Archived Products

▶ Register a Product

## Limited One Year Warranty

At AcuRite, we proudly uphold our commitment to quality technology. Chaney Instrument Co. warrants that all products it manufactures to be of good material and workmanship, and to be free of defects when properly installed and operated for a period of one year from the date of purchase.

We recommend that you visit us at [www.AcuRite.com](http://www.AcuRite.com) for the fastest way to register your product. However, product registration does not eliminate the need to retain your original proof of purchase in order to obtain warranty benefits.

Chaney Instrument Co. warrants that all products it manufactures to be of good material and workmanship, and to be free of defects when properly installed and operated for a period of one year from the date of purchase. Remedy for breach of this warranty is limited to repair or replacement of the defective item(s). Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from date of sale will, upon examination by Chaney, and at its sole option, be repaired or replaced by Chaney. Transportation costs and charges for returned goods shall be paid for by the purchaser. Chaney hereby disclaims all responsibility for such transportation costs and charges. This

warranty will not be breached, and Chaney will give no credit for products it manufactures which have received normal wear and tear, been damaged (including by acts of nature), tampered, abused, improperly installed, damaged in shipping, or repaired or altered by others than authorized representatives of Chaney.

The above-described warranty is expressly in lieu of all other warranties, express or implied, and all other warranties are hereby expressly disclaimed, including without limitation the implied warranty of merchantability and the implied warranty of fitness for a particular purpose. Chaney expressly disclaims all liability for special, consequential or incidental damages, whether arising in tort or by contract from any breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Chaney further disclaims all liability from personal injury relating to its products to the extent permitted by law. By acceptance of any of Chaney's products, the purchaser assumes all liability for the consequences arising from their use or misuse. No person, firm or corporation is authorized to assume for Chaney any other liability in connection with the sale of its products. Furthermore, no person, firm or corporation is authorized to modify or waive the terms of this paragraph, and the preceding paragraph, unless done in writing and signed by a duly authorized agent of Chaney. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For in-warranty claims: Chaney Instrument Co.  
965 Wells St., Lake Geneva, WI 53147

# ACU>RITE®



Weather  
Stations



Temperature  
& Humidity



Weather  
Alert Radio



Kitchen  
Thermometers  
& Timers



Clocks

*It's more than accurate, it's ACU>RITE.*

AcuRite offers an extensive assortment of precision instruments, designed to provide you with information you can depend on to Plan your day with confidence™.

[www.AcuRite.com](http://www.AcuRite.com)